


OPEN 2

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

IN THE BOX

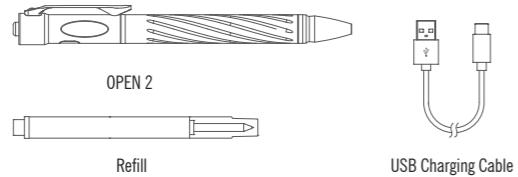

SPECIFICATIONS


HIGH	120lumens	20min	100%
MEDIUM	60lumens	40min	80%
LOW	20lumens	2h	75%
MOON	5lumens	8h	70%

16m	64cd	(L)5.71*(D)0.5in	1.34oz/38g
(L)145*(D)12.7mm			

All above specifications are test results based on ANSI/NEMA FL1-2009 Standard.


PRODUCT OVERVIEW

The product is separable; the lower part is a pen, the upper part is a flashlight and a central blue ring used as a separation point.

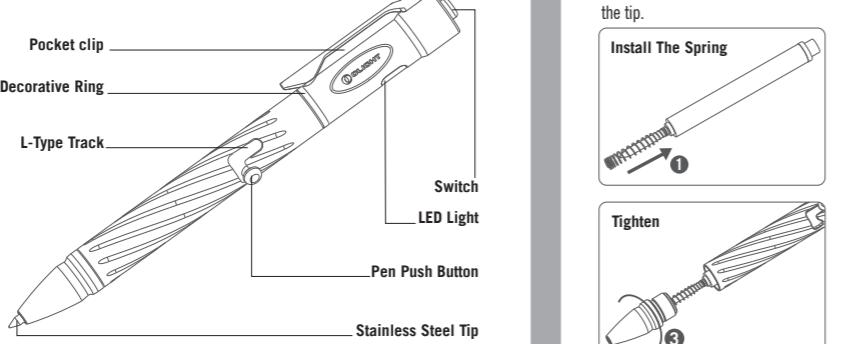

CHARGING

Unscrew the pen from the middle and store the lower part (pen). Connect the upper part to the USB power supply or computer USB port via the provided charging cable (USB power supply not included, users can use digital products or household appliance USB power supply). The LED lights up red to indicate charging, and the red will go out when it is fully charged.

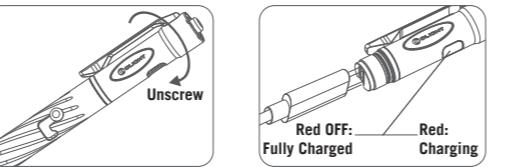


NOTE:


- * Before first use, please fully charge the product.
- * Plugin the USB cable again when it is full charged, the charging indicator will still be Red for about 30 seconds.
- * The product uses a USB-C charging interface with 4.2V 200mA constant current and voltage for charging. It can be fully charged in 55 minutes.

REFILL REPLACEMENT

a. Unscrew the tip, take out the refill and remove the spring from the refill.

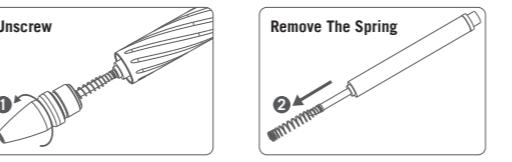

b. Put the spring on the new refill, place the new refill back into the pen and tighten the tip.

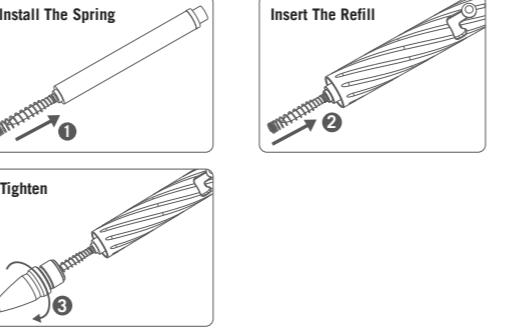

DANGER

- DO NOT throw the light directly into human eyes. This may cause temporary blindness or permanent damage to the eyes.
- DO NOT cover the flashlight with objects, the heat generated by flashlight may cause burning or even cause unexpected disasters.
- Keep out of reach of children, DO NOT allow children to play to prevent physical harm.

WARNING

- Beware of dropping:** The refill inside is a precision assembly product, and the ball on the tip may lose its writing function if damaged.
- DO NOT soak in water:** The refill of the product uses water-based ink. The ink may become lighter or unable to write if soaked in water.

NOTICE

- When the battery voltage is less than 5%, the maximum output is limited to 5 lumens.
- The product adopts PWM dimming, which may cause noise when placed close to the radio.
- The clip is suitable for clamping on objects not more than 3mm thick.
- When replacing the refill, be careful not to deform the spring, as this may affect the use of the refill.
- If the writing becomes faded or stops, swing the pen towards the tip to force ink towards the tip again.
- Writing on soft or padded surfaces may result in thicker lines.

CONTENTS

- (EN) English _ _ _ _ _ 01
 (CHS) 简体中文 _ _ _ _ _ 01
 (FI) Finnish _ _ _ _ _ 01
 (NO) Norwegian _ _ _ _ _ 01
 (SV) Swedish _ _ _ _ _ 02
 (NED) Nederland _ _ _ _ _ 02
 (PL) Polska _ _ _ _ _ 03
 (DE) Deutsch _ _ _ _ _ 03
 (HU) Magyarország _ _ _ _ _ 03
 (RU) Русский _ _ _ _ _ 04
 (ES) Español _ _ _ _ _ 04
 (RO) Românesc _ _ _ _ _ 04
 (UA) Українська _ _ _ _ _ 05
 (JP) 日本語 _ _ _ _ _ 05
 (TH) ไทย _ _ _ _ _ 05
 (FR) Français _ _ _ _ _ 05
 (BG) Български _ _ _ _ _ 06
 (IT) Italia _ _ _ _ _ 06
 (SK) Slovenský jazyk _ _ _ _ _ 06

(EN) English

OPERATION

- Used as a pen:**
 Gently slide the pen push button along the L-shaped track to the bottom, the tip will appear and be locked, then you can start writing.
 Release the pen push button to the top of the L-shaped track, the tip will bounce back into the pen.
- Used as a flashlight:**
 Single click the switch to turn the light ON (the default output is 5 lumens) / OFF.
 When the flashlight is on, press and hold the switch to automatically cycle through the output.
 Quickly double-click the switch to enter high mode even the flashlight is off, and quickly double-click the switch again to exit high mode.
 When the flashlight is off, press and hold the switch, it delivers an output of 5 lumens. Release the switch, the light will be off.

(CHS) 简体中文

- 操作说明**
当笔使用:
 轻推笔身中部手柄，沿L形轨道滑至底部，笔尖伸出并锁定，可开始书写；
 释放手柄至L形轨道上端，笔尖收回至笔头内。

当作为照明灯使用:

单按上端面按键执行开/关机，开机默认5流明；

长按改变亮度,输出亮度按升序依次改变；

快速双按直接进入高亮或从亮度返回；关机状态下也可通过快速双按进入高亮；
 关机状态下，按下按键帽并保持，光源输出5流明，按键释放时熄灭。

(FI) Finnish

KÄYTÖÖHJELMÄ:

Kynä-käytö:
 Liu uta kynän painike L-muodosta rataan pitkin alaspinä, kunnes kynän kärki on näkyvillä ja lukittunut. Sitten voit aloittaa kirjoittamisen.

Vapauta kynän painike L-muotona radan yläosaan, kärki työntyy takaisin kynän sisälle.

Lampu-käytö:

Kytke valo päälle/pois päältä painamalla virtanappia kerran (oleutusena valoheitto on 5 lumenia). Kun valo on kytketty päälle, paina ja pidä virtanappia pohjassa vaihtaksesi valoheitolle (High mode). Toiminto on käytössä, vaikka valo olisi sammutettuna. Kaksosnapauta virtanappia nopeasti siirtyksesi kirkkaimmalle valoheolle (High mode).

Kaksosnapauta virtanappia nopeasti siirtyksesi kirkkaimmalle valoheolle (High mode). Toiminto on käytössä, vaikka valo olisi sammutettuna. Kaksosnapauta virtanappia nopeasti poistuksesi kirkkaimmalla valoheolla.

Kun valo on sammutettuna, paina ja pidä virtanappia pohjassa, nän saat kytketysti 5 lumenin valoheon pääle. Sammuta valo vapauttamalla kytken.

(NO) Norwegian

BETJENING

Bruke som en pen:

Skyv pennesten forsiktig langs det L-formede sporet til bunnen, spissen vil vises og være låst, så kan du begynne å skrive.

Slipp penneknappen til toppen av det L-formede sporet, spissen spreter tilbake inn i pennen.

Používa sa ako svietidlo:

Jedným kliknutím na prepínací zapnete svetlo (predvolený výstup je 5 lúmenov) / VYP. Keď je svietidlo zapnuté, stačí činnosť prepínacieho tlačidla, aby sa automaticky cyklicky prechádzal cez výstupy.

Rýchlym dvojtým kliknutím na prepínací vstup do režimu vysokej svietivosti, aj keď je batéria vypnutá, a rýchlym dvojtým kliknutím na prepínací režim výstupy.

Keď je batéria vypnutá, stačí činnosť prepínacieho tlačidla, ktorý vydá výstup 5 lúmenov. Uvoľnite spinač, svetlo zhasne.

WARRANTY

Within 30 days of purchase: Contact the original seller for repair or replacement.

Within 2 years of purchase: Contact Olight for repair or replacement.

The other no warranty fragile or low-value fittings like refill and USB cable, you can contact post-sale in 30 days after purchase if it has quality drawback or damage under normal use condition. Over 30 days or damage under abnormal use condition, the conditional quality assurance will be provided as appropriate.

USA Customer Support

cs@olightstore.com

Global Customer Support

customer-service@olightworld.com

Visit www.olightworld.com to see our complete product line of portable illumination tools.



EU-DECLARATION OF CONFORMITY

EU-Declaration of Conformity can be found here:
<https://olightworld.com/ec-declaration>

OLIGHT

Dongguan Olight E-Commerce Technology Co., Ltd

4th Floor, Building 4, Kegu Industrial Park, No 6 Zhongan Road, Changan Town, Dongguan City, Guangdong, China.

Made in China

3.1320.6010.9000

A. 07, 28, 2020



AAN te zetten (de standaarduitvoer is 5 lumen) / UIT.

Als de zaklamp aan is, houdt u de schakelaar ingedrukt om automatisch door de uitgang te bladeren. Dubbelklik snel op de schakelaar om naar de hoge modus te gaan, dit werkt zelfs als de zaklamp is uitgeschakeld, en dubbelklik snel opnieuw op de schakelaar om de hoge modus te verlaten.

Als de zaklamp uit is, houdt je de schakelaar ingedrukt, hij levert een output van 5 lumen. Laat de schakelaar los, het licht is uit.

(PL) Polska

INSTRUKCJA UŻYTKOWANIA

Sposób użycia długopisu:

Delikatnym ruchem, wzdłuż ścieżki w kształcie litery L, przesuń przycisk długopisu w dół. Końcówka zostanie zablokowana i możesz zacząć pisać.

W celu schowania końcowki długopisu należy naciśnąć na przycisk i przesuń go wzdłuż ścieżki "L" do góry.

Sposób użycia latarki:

Jedno kliknięcie własnika uruchamia latarkę w trybie 5 lumenów (tryb domyślny). Kolejne kliknięcie wyłącza latarkę.

Kiedy latarka jest włączona, przytrzymanie przycisku powoduje przejście pomiędzy trybami.

Szybkie dwukrotne naciśnięcie na przycisk powoduje włączenie trybu wysokiego. Funkcja ta działa również w momencie kiedy latarka jest wyłączona.

Kiedy latarka jest włączona, naciśnięcie i przytrzymanie przycisku uruchamia tryb 5 lumenów, puszczanie przycisku wyłącza latarkę.

(DE) Deutsch

BEDIENUNG

Als Kugelschreiber:

Schiebe den Bolzen entlang der L-förmigen Vertiefung bis die Schreibspitze einrastet, um zu schreiben. Bewege den Bolzen aus der arrierten Position nach oben, um die Schreibspitze zurück in den Kugelschreiber zu bewegen.

Als Taschenlampe:

Mit einem einfachen Betätigen des Schalters kann die Lampe mit 5 Lumen Leuchtkraft an- oder ausgeschaltet werden.

Durch gedrückt halten des Schalters im eingeschalteten Zustand kann zwischen den verschiedenen Modi gewechselt werden.

Ein schnelles doppeltes Drücken des Schalters aktiviert oder deaktiviert den hohen Modus.

Durch gedrückt halten des Schalters im ausgeschalteten Zustand wird die Lampe temporär im 5 Lumen-Modus aktiviert. Nach Loslassen des Schalters schaltet sich das Licht aus.

(HU) Magyarország

A HASZNÁLAT MÓDJA

Használat tollként:

Óvatosan csúsztassa végig a toll nyomógombját az L-alakú pályán az alsó végpontig. Ekkor a tollhegy kicsúszik, és mután ebben a pozícióban rögzül, hozzá lehet fogni az íráshoz.

Oldja a toll nyomódombját és engedje fel az L-alakú pálya felső végpontjáig. Ekkor a tollhegy visszahúzódik a toll belsejében.

Használat elemlámpaként:

A kapcsoló egyszerű kattintással a lámpa BE (alapbeállítás szerint a fényerő 5 lumen) / KI kapcsoltható.

A kapcsoló allapotban lévő lámpán a kapcsológomb nyomva tartásakor a lámpa automatikusan végigkapsol az összes fényerőfokozaton.

A kapcsológomb gyors kettős kattintással a kapcsoló allapotban lévő lámpa is erős

Bruke som en lommelykt:

Enkeltklikk på bryteren for å slå på lyset (standardlysstyrke er 5 lumen) / VYP.

Når lommelykten er på, trykk og hold bryteren for automatisk å bli gjennom effektivisert.

Dobbelklikk raskt på bryteren for å gå inn i «high mode» til og med hvis bryteren er slått av, og dobbelklikk raskt bryteren igjen for å gå